

Owner's Guide

VISION  FITNESS®

***E3600HRT, R2600HRT
AND R2650HRT
COMMERCIAL FITNESS BIKES***

Congratulations on choosing a VISION FITNESS Bike. You've taken an important step in developing and sustaining an exercise program! Your Bike is a tremendously effective tool for achieving your facility's fitness goals. Regular use of your Bike can improve the quality of your members' lives in so many ways.

Here are just a few of the health benefits of aerobic exercise:

- Weight Loss
- A Healthier Heart
- Improved Muscle Tone
- Increased Daily Energy Levels
- Reduced Stress
- Help in Countering Anxiety and Depression
- An Improved Self Image

The key to reaping these benefits is to develop the exercise habit. Your new Bike will be an important tool in helping your members achieve this exercise habit. This Owner's Guide provides you with basic information on using this VISION FITNESS Bike. A more complete knowledge of your new Bike will assist you in helping your members achieve their goals.

Some kinds of service to your Bike should only be performed by your VISION FITNESS retailer. Please contact your authorized VISION FITNESS retailer should service be required. If a question or problem arises which cannot be handled by your VISION FITNESS retailer, please contact us:

VISION FITNESS
500 South CP Avenue
P.O. Box 280
Lake Mills, WI 53551
Ph: 1.800.335.4348
Fax: 1.920.648.3373
www.visionfitness.com

Table of Contents

ALL MODELS

SAFETY INSTRUCTIONS	6
ASSEMBLY & MOVING THE BIKE ...	8
PLACEMENT & STABILIZING THE BIKE, PEDAL STRAP ADJUSTMENT	9
E3600HRT SEAT ADJUSTMENT, SEAT POSITIONING	10
R2600HRT SEAT ADJUSTMENT, LUMBAR ADJUSTMENT	11
SELF-POWERED FEATURE	12
CONTACT HEART RATE	13

R2600HRT


R2650HRT

E3600HRT CONSOLE


DISPLAY CONSOLE	14
DISPLAY CONSOLE DESCRIPTIONS ..	15
CSAFE PORTS	17
PROGRAM OVERVIEWS	18
USING THE PROGRAMS	22
USING THE SPRINT 8 PROGRAM ...	24
USING HEART RATE TRAINING	25
TELEMETRIC HEART RATE CHEST STRAP, PLACEMENT	26
ALL HRT PROGRAMS, ADJUSTING TARGET HEART RATE	27
USING CUSTOM PROGRAMS	29
ENGINEERING MODE	30


GENERAL

SERVICE AND TROUBLESHOOTING ..	31
TRUBLESHOOTING	32
TRUBLESHOOTING HEART RATE MONITOR CHEST STRAP	34
LIMITED HOME USE WARRANTY ...	36
COMMERCIAL WARRANTY	38
DEVELOPING A FITNESS PROGRAM .	40
EXERCISE GUIDELINES	41
TARGET HEART RATE	42
RATE OF PERCEIVED EXERTION ...	43
BALANCED FITNESS	44
STRETCHING	45
WEEKLY WORKOUT LOGS	48
MONTHLY WORKOUT LOGS	50

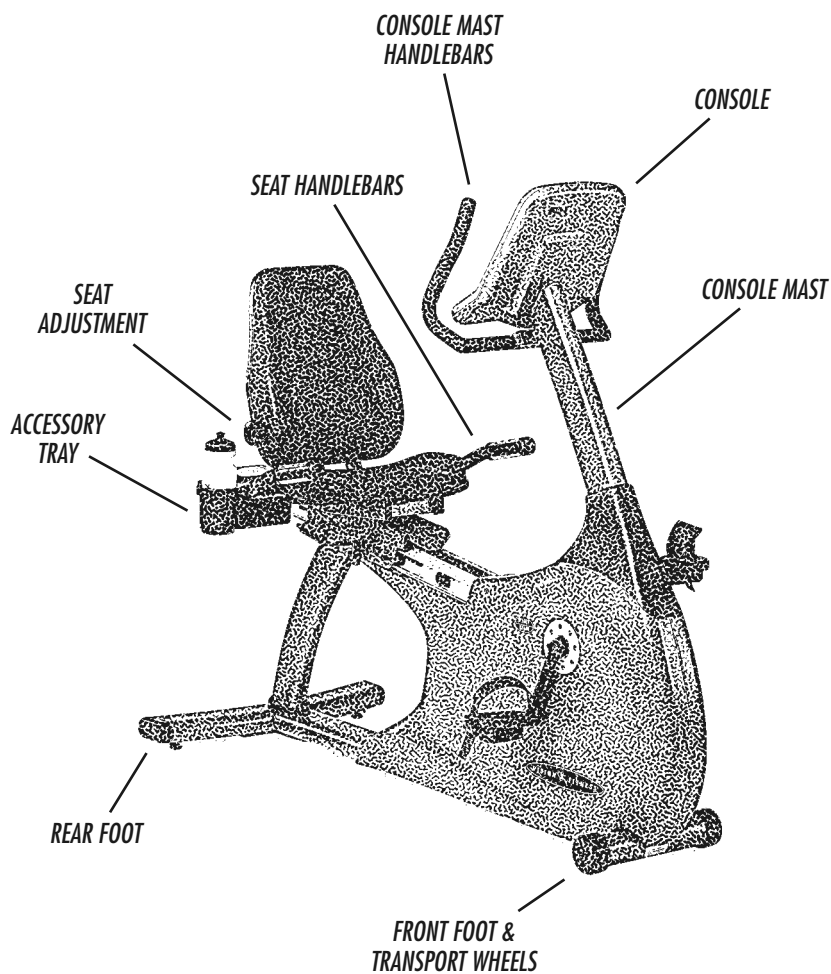**R2600HRT**

COMMERCIAL SEMI-RECUMBENT FITNESS BIKE

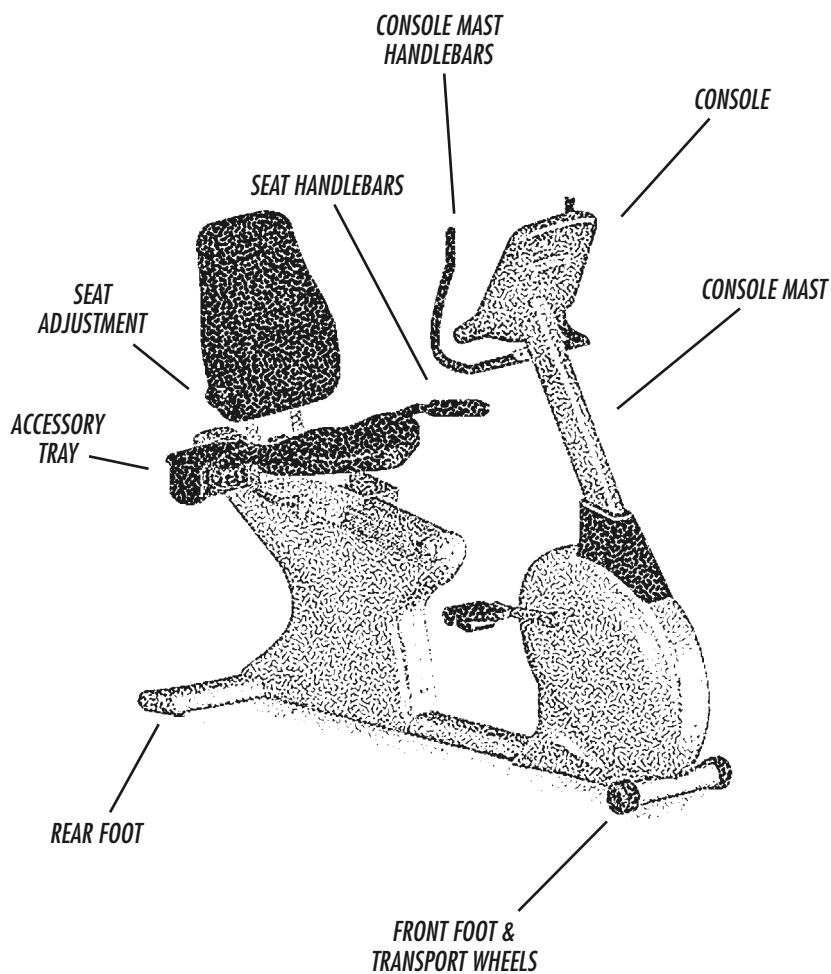

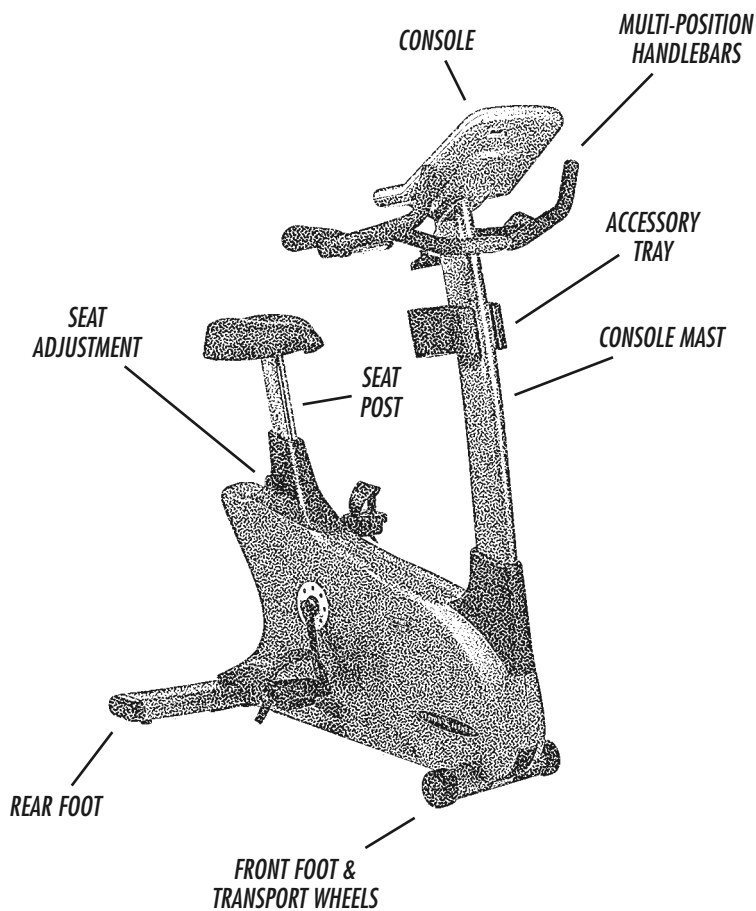**E3600HRT**

COMMERCIAL UPRIGHT FITNESS BIKE

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

When using an electrical product, basic precautions should always be followed, including the following:

Read all instructions before using this exercise product.

Your VISION FITNESS Bike is self-generating (requiring no external power source) and must be pedaled to power-up the console.

WARNING! To reduce the risk of burns, fire, electrical shock or injury to persons:

- Use this exercise product for its intended use as described in this Owner's Guide. Only use attachments recommended by the manufacturer.
- Never drop or insert any object into any opening.
- Do not remove the Bike sidecovers. Service should be performed only by an authorized VISION FITNESS retailer.
- Never operate this Bike if it is not working properly or if it has been damaged or immersed in water. Return the Bike to a retailer for examination and repair.
- Do not use outdoors.

CHILDREN

- Keep children off of your Bike at all times.
- When the Bike is in use, young children and pets should be kept at least 10 feet away.

OTHER SAFETY TIPS FOR YOUR VISION FITNESS BIKE

CAUTION! If you experience chest pains, nausea, dizziness or shortness of breath, stop exercising immediately and consult your physician before continuing.

- Do not wear loose clothing that might catch on any part of the Bike.
- Read this Owner's Guide before operating this Bike.
- Drink plenty of fluids during your workout.

CLEANING


- Clean only with soap and a slightly damp cloth; never use solvents.

ASSEMBLY

It is recommended, when possible, that an authorized VISION FITNESS retailer assemble your Bike. If you have elected to assemble this product yourself, for your safety please read and follow each of the steps in the enclosed assembly instructions. If you have any questions regarding any part or function of your Bike, contact your retailer.

MOVING


Your VISION FITNESS Bike has transport wheels included for ease of mobility. To move your Semi-Recumbent Bike, firmly grasp the rear of the frame assembly, or the rear of the seat rail. Carefully lift and roll on the transport wheels. To move your Upright Bike, firmly grasp the handlebars, carefully tip toward you, and roll on the transport wheels.

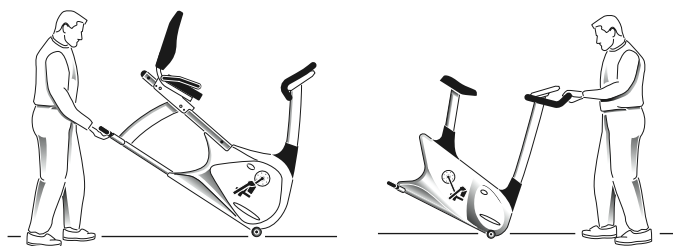

CAUTION: Our Bikes are well-built and heavy, weighing up to 160 pounds! Use care and additional help if necessary.


STABILIZING THE BIKE

After positioning the Bike in its intended location, check its stability by attempting to rock it side to side. Rocking or wobbling indicates that your Bike needs to be leveled. Determine which leveler is not resting completely on the floor. Loosen the wing nut at the base of the leveler to allow the leveler to rotate. Now rotate the leveler to the left or right until the Bike is stable. Lock the adjustment by tightening the wing nut against the rear foot support.

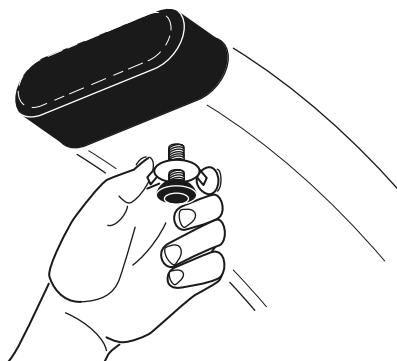


PEDAL STRAP ADJUSTMENT

The straps are designed to fit your individual foot size and should be adjusted tight enough to keep your feet from slipping. The pedals include spring-loaded clips for easy adjustment. To tighten the strap, pull down the open end of the strap. To loosen the strap, push down on the top of the clip and pull the strap up. Release the clip to lock in place.

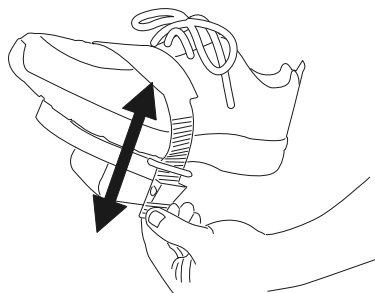

SEAT ADJUSTMENT *E3600HRT*


Your *E3600HRT* comes equipped with a ratcheting seat post for easy adjustment. To raise your seat, loosen the adjustment knob by turning two half turns in a counterclockwise direction. Place your hand under the rear of the seat and lift to the desired setting. Tighten the adjustment knob two half turns in a clockwise direction. Before sitting on the seat, push down on the seat to make sure it does not slip and is secure.

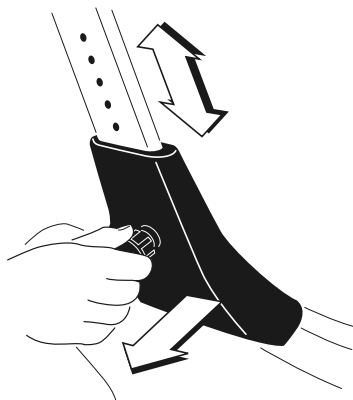

To lower the seat, loosen the adjustment knob by turning two half turns in a counterclockwise direction. Place one hand under the rear of the seat, and pull the seat pin out with the other hand. Lower the seat to its desired location. Release seat pin so the pin inserts into a hole in the seat post. Push down on the seat to make sure it is secure. Tighten the adjustment knob two half turns in a clockwise direction.

SEAT POSITIONING


To determine proper seat position, sit on the seat and position the ball of your foot on the center of the pedal. Your knee should bend slightly at the furthest pedal position. You should be able to pedal without locking your knees or shifting your weight from side to side.

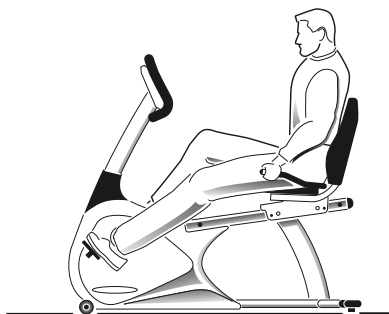

SEAT ADJUSTMENT

R2600HRT & 2650HRT


While seated on the Bike, lift the spring-loaded seat lever on the right side of the seat to make adjustments. Slide the seat forward or backward to desired location. Release the spring-loaded seat lever and gently attempt to rock forward and backward to assure it is locked in place.

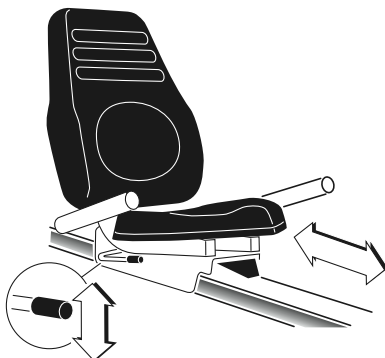

LUMBAR ADJUSTABLE SEAT R2600HRT & R2650HRT

One of the principal reasons people do not exercise is because it is uncomfortable for them. On the Semi-Recumbent Bike, the component that has the largest impact on comfort is the seat. If your seat is comfortable, you are more likely to finish your workouts and achieve your fitness goals. With the VISION FITNESS lumbar control system, you can adjust the lumbar (lower back) support specifically for your needs. This will allow a longer, more comfortable workout and will help you achieve your goals sooner.

To adjust the lumbar support, simply turn the knob located near the bottom of the backrest on the seat: to *increase* the lumbar support, turn the knob in a *clockwise* direction; to *decrease* support, turn the knob in a *counter-clockwise* direction.

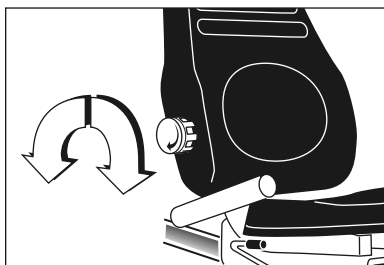


SELF-POWERED FEATURE

The *R2600HRT*, *R2650HRT*, and *E3600HRT* are self-powered units, requiring no external power source. When a user pedals at a speed above 20 revolutions per minute (RPM), the power is generated to allow the Bike to function properly. Because of this self-generating feature, the console feedback will fade away when you cease pedaling. The console does, however, use a 9-volt battery as backup to save your feedback information for 30 seconds from the time you stopped pedaling. If you resume pedaling within the 30 seconds, the information will reappear. If the information does not appear within the 30 seconds, your battery may need to be plugged in or replaced.

CONTACT HEART RATE

HAND PULSE HEART RATE SENSORS

The Contact Hand Pulse Sensors are included on each product to monitor your heart rate. To use, grasp both of the sensors with a comfortable grip during your workout. The console will display your heart rate. Although your signal will be displayed immediately, it may take the system a few seconds to zero in on your actual heart rate.

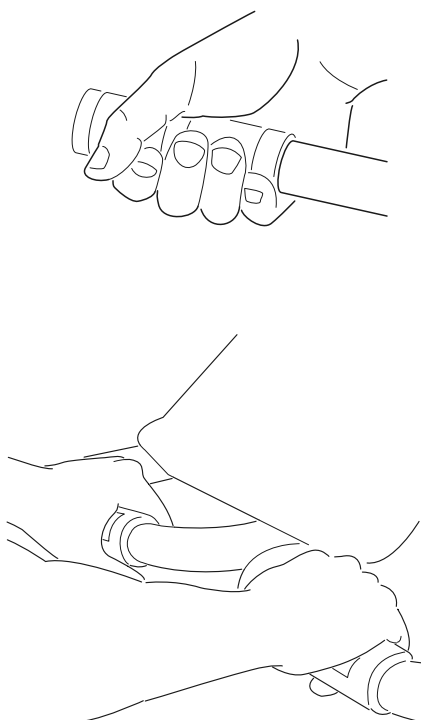

E3600HRT

The computerized display allows the user to select a workout that meets their desired fitness goals. It also allows the user to monitor the progress and feedback of each workout so they can track improvements in overall fitness over time.



DISPLAY CONSOLE DESCRIPTIONS

A. START/HOLD TO RESET

Press the START key to begin a MANUAL workout immediately without having to set individual information. When the program begins, you have the ability to adjust resistance levels with the ARROW buttons. Feedback information will be calculated using default settings.

PAUSE: If you need to PAUSE your program during a workout, pressing the START button will PAUSE your program for 30 seconds. Pressing START will return you to your workout.

RESET: If you need to RESET the console during your workout, you can do so by holding down the START button for three seconds or until the display resets.

B. ENTER/HOLD TO SCAN

This button is used after entering each piece of information in setup such as age, weight, or level.

SCAN: When exercising in a program, pressing the ENTER button will allow you to SCAN the heart rate display views. If you hold down the ENTER button for three seconds during your workout, the SCAN function will automatically alternate heart rate display views.

C. ARROW BUTTONS

These buttons are used to change values in setup mode prior to your workout. During your workout, they are used to change workout levels. In HRT® programs, they are used to change your target heart rate.

D. PROGRAM BUTTONS

These buttons provide quick access to your favorite workouts. There is no need to scroll through the programs to find the one you want. Simply press the program button and begin user setup.

R2600HRT

R2650HRT

E3600HRT

DISPLAY CONSOLE DESCRIPTIONS (continued)

E. PROFILE DISPLAY

This window provides a dot matrix profile of the workout segments you are about to complete, as well as the ones you have already completed, and the level of resistance for each segment.

F. MESSAGE/FEEDBACK WINDOWS

These windows provide step-by-step instructions in the setup mode, instructions, feedback and motivational messages during your workout.

FEEDBACK:

During your workout, these windows display exercise feedback about your workout, including:

TIME: the time elapsed or the time remaining in your workout.

SPEED: the pedaling speed in miles or kilometers per hour.

DISTANCE: the total distance traveled in miles or kilometers since the start of your workout.

RPM: the pedal rate or Revolutions Per Minute (RPM).

WATTS: a measurement of workload; one watt is equal to six kilogram-meters per minute.

CALORIES: an estimate of calories burned since the beginning of the workout.

LEVEL: the current resistance level of your workout.

METS: a measurement of oxygen consumption; one MET equals the approximate amount of oxygen consumed per minute by a person at rest.

NOTE: At the end of your workout, the totals will be displayed as averages of your total workout time. The only exceptions are distance and calories, which are program totals.

G. HEART RATE/HRT FEEDBACK WINDOW

This window provides feedback on your current heart rate and the percent of your predicted maximum heart rate (% Heart Rate). It also includes your target heart rate when using one of the HRT® programs on the 600HRT products.


CSAFE PORTS

Two CSAFE ports allow the VISION FITNESS Bike to be connected to various networks or entertainment systems.

- **CSAFE:** This feature enables the console to upload user workout statistics to a network database such as Fitlinxx®.
- **CARDIO:** This feature allows the console to power a third-party receiver for entertainment systems such as Cardio Theater®.

BATTERY COMPARTMENT

Make sure a 9-volt battery is plugged into the console for backup memory.

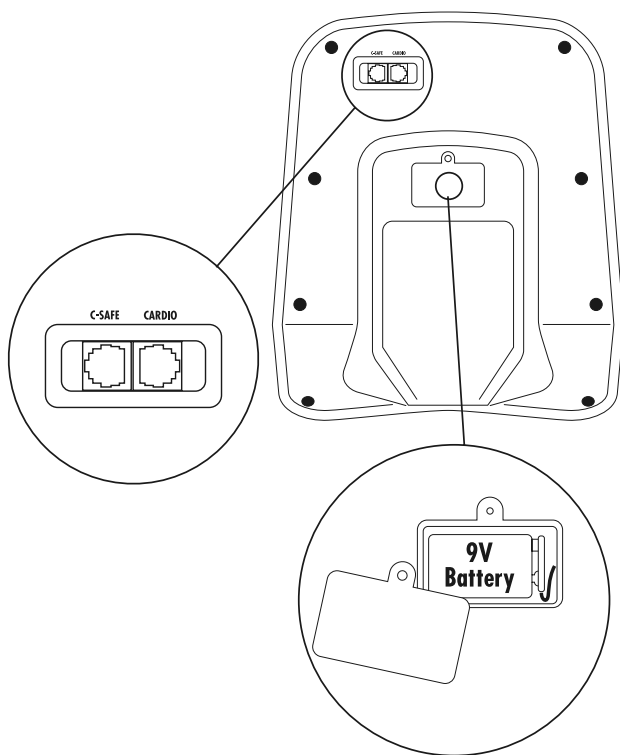


THE 600HRT SERIES PROGRAMS

PROGRAM OVERVIEWS



MANUAL is a user-controlled program in which the resistance remains at a set level unless you decide to change it.

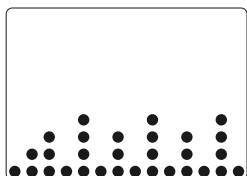


INTERVAL is an efficient workout that strengthens your cardiovascular system by alternating work intervals and recovery intervals. Be sure to challenge yourself with intense work intervals.



WEIGHT LOSS is a program designed to target your stored body fat. This program is generally used at a slightly lower resistance level but runs for longer durations than other programs.



CONSTANT WATTS is a program that lets you exercise at a set work level. As you increase your pedal rate (your RPM), your resistance will decrease; as you decrease your pedal rate, your resistance will increase.

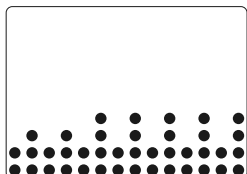


SPRINT 8 is an anaerobically-based interval program. It is effective in recruiting fast twitch muscle fibers and improving athletic performance.

R2600HRT

R2650HRT

E3600HRT

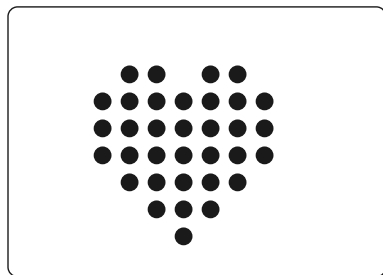


HRT CARDIO is a high-intensity program that keeps you at the upper range of your predicted maximum heart rate and promotes cardiovascular endurance and maximum calorie burning. The user must grasp the hand pulse sensors or wear a telemetric heart rate chest strap during use. The program will automatically adjust resistance to keep you at 80% of your predicted maximum heart rate.

HRT WEIGHT LOSS is a lower intensity workout that will help your body burn a higher percentage of calories from your body's fat reserves. The user must grasp the hand pulse sensors or wear a telemetric heart rate chest strap during use. The program will automatically adjust resistance to keep you at 65% of your predicted maximum heart rate.

HRT INTERVAL alternates between effort intervals of 80% and 70% of your predicted maximum heart rate. This program is designed to increase your cardiovascular fitness capacity. The user must grasp the hand pulse sensors or wear a telemetric heart rate chest strap during use.

HRT HILL increases your intensity level from 65% to 70% to 75% to 80% of your predicted maximum heart rate to promote cardiovascular strength and endurance. The user must grasp the hand pulse sensors or wear a telemetric heart rate chest strap during use.

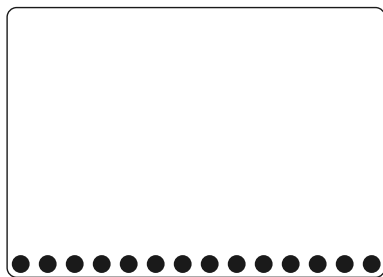


CUSTOM allows you to preset up to five workout profiles by setting the workload of each segment in the program. You have the ability to save or change the workouts whenever you wish.

USING THE PROGRAMS


SELECTING EASY START

The easiest way to begin exercising is to simply press the START button. You will begin exercising in a MANUAL resistance program in which you can change the resistance levels to meet your goals. Current default settings will be used to determine exercise feedback.

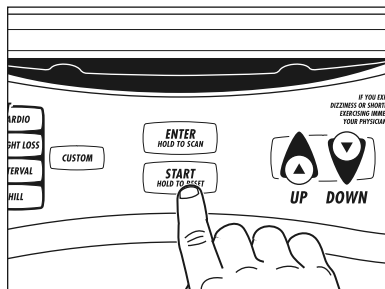


SELECTING A PROGRAM

Each program has its own program button. Press the button of the program you would like to use. You can also use the arrow buttons to scroll through the program options and see the exercise profiles for each of the programs.

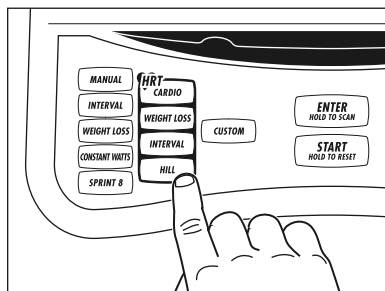


ENTERING AGE

When prompted by the message center to enter your age, use the UP ▲ arrow or DOWN ▼ arrow to adjust displayed age to the correct value. This information is necessary for the HRT® programs and will affect your “% Heart Rate” feedback.

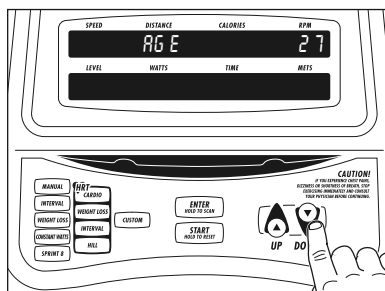


ENTERING TIME

When prompted by the message center to enter a time, use the UP ▲ arrow and DOWN ▼ arrow to adjust the displayed exercise time to a desired value.

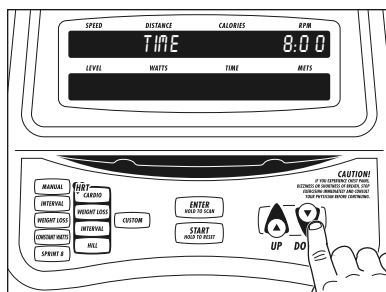


ENTERING WEIGHT

When prompted by the message center to enter weight, use the UP ▲ arrow and DOWN ▼ arrow to adjust the displayed weight to equal your current body weight. This information is necessary to give accurate exercise feedback for calorie and MET calculations.

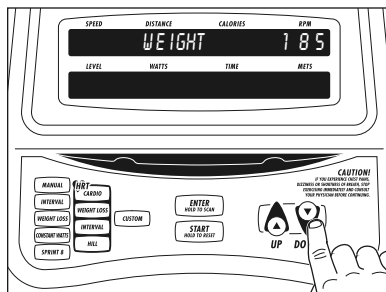

ENTERING LEVEL

When prompted by the message center to enter level, use the UP ▲ arrow and DOWN ▼ arrow to adjust the displayed resistance level. There are 20 levels of resistance to choose from in each program. The maximum resistance level varies by program.

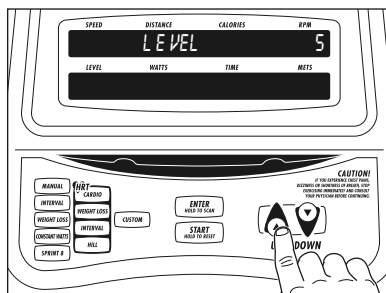

The CONSTANT WATTS program will ask you to set the desired WATT level instead of resistance levels. The WATT level will range from 40 to 250 in increments of five.

The HRT CARDIO and HRT WEIGHT LOSS programs will set your target heart rate in the place of resistance level. The console will display your target heart rate and give you the opportunity to adjust this value if you wish.

R2600HRT

R2650HRT

E3600HRT

USING THE SPRINT 8 PROGRAM

The SPRINT 8 program is an anaerobic interval program designed to build muscle, improve speed, and naturally increase the release of Human Growth Hormone (HGH) in your body. Producing HGH through exercise and a proper diet has been shown as an effective way to burn fat and build lean muscle mass according to Phil Campbell, author of *Ready, Set, GO! SYNERGY FITNESS*. Please go to Mr. Campbell's website, www.readysetgofitness.com, for more details about this radical new approach to fitness.

The SPRINT 8 program features intense sprint intervals followed by recovery intervals. The program includes the following phases:

1. **WARM-UP** should gradually increase your heart rate and increase respiration and blood flow to working muscles. The warm-up is controlled by the user to meet your specific needs.
2. **INTERVAL TRAINING** starts immediately after the warm-up with a 30-second sprint interval. Seven recovery intervals of one minute and 30 seconds will alternate with the eight 30-second sprint intervals. The message display will prompt you to increase your pedal rate during the sprint interval and decrease pedal rate during the recovery interval. A difference of 30 to 50 RPM between sprint interval and recovery interval is recommended.
3. **COOL-DOWN** helps return your body's systems to resting levels. Less demand is placed on your heart during recovery if an appropriate cool-down is used following the exercise.

Due to the fact that this is a specialized training program, total workout time is not displayed during the program. The interval time is displayed in the time window instead. It takes only 20 minutes to complete the SPRINT 8 workout.

USING HEART RATE TRAINING

WHAT IS HEART RATE TRAINING?

Heart Rate Training means exercising at an intensity that keeps you in your ideal heart rate zone. Your personal heart rate training zone depends on your fitness goal, such as weight loss, cardiovascular endurance, or strength building. Refer to page 42 for more information on heart rate training zones. VISION FITNESS HRT® programs are set up to keep you at an ideal heart rate based on your fitness goal. These programs automatically adjust resistance based on your heart rate readings.

The 600HRT console features four programs (HRT Weight Loss, HRT Cardio, HRT Interval, and HRT Hill) that offer the benefits of Heart Rate Training. Refer to page 28 for more details on these programs.

- *These programs use the predicted maximum heart rate formula (220 minus age) to determine your predicted maximum heart rate. Some individuals have higher or lower maximum heart rates than determined by this formula. The programs allow you to modify your Target Heart Rate to achieve your personal goals.*

HAND PULSE HEART RATE SENSORS


The Contact Hand Pulse Sensors are included on each product to monitor your heart rate. To use, grasp both of the sensors with a comfortable grip during your workout. The console will display your heart rate. Although your signal will be displayed immediately, it may take the system a few seconds to zero in on your actual heart rate.



NOTE: The Contact Hand Pulse Sensors will work for the HRT® programs, but it is recommended to use the telemetric chest strap for an uninterrupted signal and ease of use.


TELEMETRIC HEART RATE CHEST STRAP

The wireless Telemetric Chest Strap uses a pair of electrodes on the underside of the strap to send your heart rate signal to the console. Prior to wearing the chest strap, moisten the two rubber electrode pads with several drops of water. These electrodes must remain wet to provide an accurate signal. We advise using the chest strap against your skin, but it also functions through a thin layer of wet clothing.

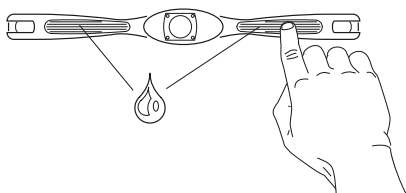

STRAP PLACEMENT

Center the transmitter strap just below the breast or pectoral muscles, directly over your sternum with the VISION FITNESS logo facing out. Adjust the elastic strap so it is snug but comfortable enough for proper breathing.

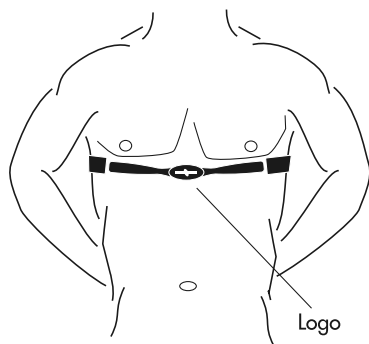


ALL HRT PROGRAMS

During the workout, the user will grasp the hand pulse sensors or wear the telemetric chest strap to send their heart rate signal to a receiver in the console. The console will continuously monitor the heart rate, adjusting the resistance level of the Bike to keep your heart rate within several beats of your target heart rate. By using the SCAN button, the heart rate feedback window conveniently displays your Heart Rate, % Heart Rate, and your Target Heart Rate to keep you informed about your current heart rate. Each program will begin with a two-minute warm-up. When the workout time has been completed, the console will begin a five-minute cool-down. The user will be responsible for adjusting resistance to meet their needs during the warm-up and cool-down.

ADJUSTING TARGET HEART RATE

While exercising in one of the HRT® programs, you may decide the target heart rate needs to be adjusted. To adjust your target heart rate, use the UP ▲ arrow or DOWN ▼ arrow. Push ENTER to select.

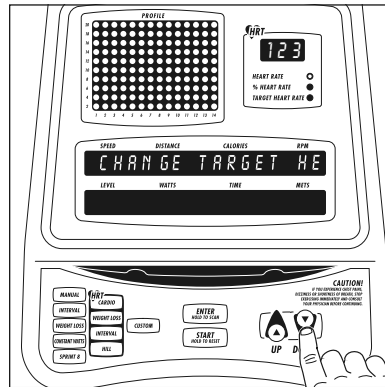

HRT CARDIO

The HRT CARDIO program is designed to maintain your heart rate at 80% of your predicted maximum heart rate. It is intended to improve efficiency and endurance of your cardiovascular system by working your heart, lungs and circulatory systems. This is a great workout for anyone, but beginners may want to start lower and build their way up to 80% of their predicted maximum heart rate.

HRT WEIGHT LOSS

The HRT WEIGHT LOSS program is designed to maintain your heart rate at 65% of your predicted maximum heart rate. The goal of this program is to burn calories by using your body's fat reserves as the primary fuel during exercise and to improve the efficiency of your workout by eliminating over-training or under-training. This is a great workout for beginners.

HRT INTERVAL

The HRT INTERVAL program is designed to increase aerobic endurance and your overall fitness level, increase endurance of muscle fibers, and increase the amount of calories burned in your exercise session. This program consists of alternating effort and recovery intervals. The target heart rate for your effort interval will be 80% of your predicted maximum heart rate, while the target heart rate for your recovery intervals will be 70% of your predicted maximum heart rate. The two-minute effort interval begins when you reach your target heart rate for that particular interval.

HRT HILL

The HRT HILL program uses four different target heart rates to build cardiovascular strength and endurance. The resistance will adjust until your heart rate reaches the target heart rate for the four separate hills. The hills will be set at 65%, 70%, 75%, and 80% of your predicted maximum heart rate. The program will keep you at each heart rate level for one minute from the time the target heart rate is reached. The program will repeat the series of hills until the workout time is complete.

USING CUSTOM PROGRAMS

The CUSTOM programs allow five separate workout choices to be set and then stored for future use.

Setup for the CUSTOM programs begins just as any other program. The user will push the CUSTOM program button, set age, set time, and set weight. At this point, the console will ask the user to select one of five CUSTOM programs. If the programs have not yet been set, the user can follow these setup instructions:

1. Use the arrows to select one of five CUSTOM programs.
2. Press ENTER to select.
3. The dot on the bottom left corner of the dot matrix will now be flashing. Use the UP ▲ or DOWN ▼ arrow to adjust the resistance of the first segment to your desired setting.
4. Push ENTER to select.
5. Continue setting each segment until all 16 segments have been set.
6. When you have pressed ENTER after the final segment, the program will automatically begin.

Each program will remain saved in the console's memory and can be used over again.

If the CUSTOM programs have already been saved, you have two options:

1. Press START to begin the program as it has been set.
2. Press ENTER to begin resetting each segment for a new program.

R2600HRT

R2650HRT

E3600HRT

ENGINEERING MODE

Engineering mode consists of 11 optional settings. Use the engineering mode to enable certain features or displays on your Bike console.

ENTERING AND USING ENGINEERING MODE

- Press and hold the UP ▲ and DOWN ▼ buttons for approximately three seconds.
- The console will beep and display engineering modes and optional settings. Use the UP ▲ or DOWN ▼ buttons to scroll through the options. Press the ENTER button to select the appropriate mode or setting.

OPTIONAL SETTINGS

SETTING	DESCRIPTION
MAX TIME	SET A MAXIMUM WORKOUT TIME
USER TIME	SET A DEFAULT TIME FOR ALL PROGRAMS
DF AGE	SET A DEFAULT AGE FOR ALL PROGRAMS
DF WEIGHT	SET A DEFAULT WEIGHT FOR ALL PROGRAMS
UNIT	SET THE BIKE TO MILES OR KILOMETERS
MACHINE	SET UNIT TO BIKE OR ELLIPTICAL MODE
AC TIME	DISPLAY ACCUMULATED HOURS OF USE
AC DIST	DISPLAY ACCUMULATED MILES OR KM OF USE
DISPLAY TEST	USED BY SERVICE TECHNICIANS TO TEST LED DISPLAYS
MACHINE TEST	USED BY SERVICE TECHNICIANS TO TEST MECHANICAL AND CSAF FUNCTIONS
VERSION	DISPLAY CURRENT SOFTWARE VERSION

- Use the UP ▲ and DOWN ▼ buttons within each setting to change the setting.
- Press the START button to save settings.
- To EXIT engineering mode, press and hold the START button for three seconds.

SERVICE AND TROUBLESHOOTING

PREVENTATIVE MAINTENANCE TIPS

- Locate Bike in a cool, dry place.
- Clean the top surface of the pedals regularly.
- Make sure pedals are kept tight to crank arms.
- Keep the display console free from fingerprints and salt buildup caused by sweat.
- Use a cotton cloth with water and a mild cleaning product to clean the Bike. Other fabrics, including paper towels, may scratch the surface. Do not use ammonia or acid-based cleaners.
- Clean the housing thoroughly on a regular basis.

PREVENTATIVE MAINTENANCE SCHEDULE

Follow the schedule below to ensure proper operation of the product.

<i>ITEM</i>	WEEKLY	MONTHLY	BI-ANNUALLY	ANNUALLY
DISPLAY CONSOLE	CLEAN	INSPECT		
CONSOLE MOUNTING BOLTS			INSPECT	
FRAME	CLEAN			INSPECT
SEAT FRAME	CLEAN	INSPECT		
HANDLEBARS	CLEAN	INSPECT		
PLASTIC COVERS	CLEAN	INSPECT		
PEDALS AND STRAPS	CLEAN	INSPECT		
SEAT	CLEAN		INSPECT	

TROUBLESHOOTING

Our Bikes are designed to be reliable and easy to use. If, however, you have a problem, these troubleshooting steps may reveal the cause.


PROBLEM: The console does not light up.

SOLUTION: Make sure you are pedaling the Bike.

SOLUTION: Make sure the wire harness is plugged into the back of the console.

PROBLEM: The Bike is making a clicking noise.

SOLUTION: Using the pedal wrench supplied with your Bike, remove both the left and right pedals, apply grease to the threaded portion and reassemble the pedals onto the Bike. Make sure the pedals are tight.

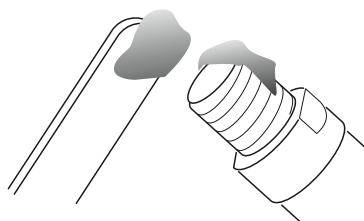

SOLUTION: Make sure the pedal straps or your shoe laces are not hitting the side cover.


SOLUTION: Assure seat adjustment is tight (see pages 10 and 11).

PROBLEM: The Bike makes a squeaking or creaking noise.

SOLUTION: Check and tighten all hardware.

PROBLEM: The seat on your semi-recumbent Bike rocks from side to side.

SOLUTION: With a 13mm wrench, loosen the Fixing Nuts on the side of the seat frame. With an 11mm wrench, pivot the Adjusting Post so the Fixing Nut is at the top of the slot. Tighten the Fixing Nut with the 13mm wrench.

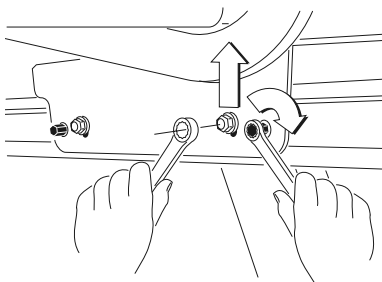

NOTE: If the above steps fail to remedy the problem, discontinue use, turn the power off and contact your retailer.

OBTAINING SERVICE

Do not attempt to service this Bike yourself except for the maintenance tasks described in this manual. For information on service to your VISION FITNESS Bike, contact the local retailer from whom you purchased the Bike. To expedite service, please make sure to have your serial number available. The serial number is found on a label located on the front support tube of your Bike.

SERIAL NUMBER: _____

TROUBLESHOOTING YOUR HEART RATE MONITOR CHEST STRAP

PROBLEM: No pulse reading appears.

SOLUTION: There may be a poor connection between the contact pads and skin; remoisten the electrode pads.

SOLUTION: Transmitter is not properly positioned; reposition the chest strap.

SOLUTION: Verify that the distance between the transmitter and receiver is not beyond the recommended range of 36 inches.

PROBLEM: There is an erratic pulse rate.

SOLUTION: Chest strap is too loose; readjust according to directions.

NOTE: It is possible that heart rate monitors will not function properly on some people for a variety of reasons. It may be necessary to experiment with the fit and position of the chest strap. Outside interference sources such as computers, motors, electric dog fences, home security systems, remote controls, CD players, fluorescent lights, etc., may cause problems for heart rate monitors.

LIMITED HOME USE WARRANTY

VISION FITNESS extends the following exclusive, limited warranty, which shall apply only to the use of the device in the home, for residential, non-commercial purposes. Any other use of the device shall void this warranty.

VISION FITNESS hereby extends the following limited warranties for the following components of the device, for the time period indicated:

FRAME - LIFETIME VISION FITNESS warrants the Frame against defects in workmanship and materials for the life of the product, so long as it remains in the possession of the original owner.

CAMBRIDGE MOTOR WORKS™ GENERATOR SYSTEM - LIFETIME VISION FITNESS warrants the Cambridge Motor Works™ Generator System against defects in workmanship and materials for the life of the product, so long as the device remains in the possession of the original owner.

ELECTRONICS & PARTS - THREE YEARS VISION FITNESS warrants the Electronic components and all original Parts against defects in workmanship and materials for a period of three years from the date of purchase, so long as the device remains in the possession of the original owner.

LABOR - TWO YEARS VISION FITNESS shall cover the Labor cost for the repair of the device for a period of two years from the date of original purchase, so long as the device remains in the possession of the original owner.

LIMITED HOME USE WARRANTY (continued)

EXCLUSIVE REMEDY

The exclusive remedy for any of the above warranties shall be repair or replacement of defective Parts, or the supply of Labor to cure any defect, provided that Labor shall be limited to two years. All Labor shall be supplied by the local Retailer and the product must be located within that Retailer's service area. Products located outside the Retailer's service area will not be covered by the Labor warranty.

EXCLUSIONS AND LIMITATIONS

This warranty applies only to the original owner and is not transferable. This warranty is expressly limited to the repair or replacement of a defective Frame, Cambridge Motor Works™, Generator, Electronic component, or defective Part and is the sole remedy of the warranty. The warranty does not cover normal wear and tear, improper assembly or maintenance, or installation of parts or accessories not originally intended or compatible with the Fitness Product as sold. The warranty does not apply to damage or failure due to accident, abuse, corrosion, discoloration of paint or plastic, or neglect. VISION FITNESS shall not be responsible for incidental or consequential damages. Parts and Electronic components reconditioned to As New Condition by VISION FITNESS or its vendors may sometimes be supplied as warranty replacement parts and constitute fulfillment of warranty terms. Any warranty replacement parts shall be warranted for the remainder of the original warranty term.

VISION FITNESS expressly disclaims all other warranties, express or implied, including but not limited to all warranties of fitness for a particular purpose or of merchantability. This warranty gives you specific legal rights, and your rights may vary from state to state.

WARRANTY REGISTRATION

Your warranty card must be completed and sent to VISION FITNESS before a warranty claim can be processed. You may also register via our website at www.visionfitness.com. Inside the enclosed warranty card, you will find a customer survey. Your care in completing the survey will be of value to us in serving you in the future. Comments and suggestions are always welcome. We are certain you will enjoy your new Fitness Bike. Thank you for selecting a VISION FITNESS product.

COMMERCIAL WARRANTY

COMMERCIAL USES DEFINED VISION FITNESS warrants the *E3600HRT*, *R2650HRT*, & *R2600HRT* Fitness Bikes for use in commercial facilities. Examples of commercial facilities include but are not limited to: Hotels; Resorts; Police and Fire Stations; Apartment Complexes; Rehabilitation and Sports Medicine Clinics; Hospitals; Elementary, Middle, and High Schools; YMCAs; Private Health Clubs; Colleges and Universities.

FRAME - LIFETIME VISION FITNESS warrants the Frame against defects in workmanship and materials for the lifetime of the original owner, so long as the device remains in the possession of the original owner.

CAMBRIDGE MOTOR WORKS™ GENERATOR SYSTEM, ELECTRONICS & PARTS - THREE YEARS VISION FITNESS warrants the Generator System, Electronics & Parts against defects in workmanship and materials for a period of three years from date of original purchase, so long as the device remains in the possession of the original owner.

LABOR - ONE YEAR For a period of one year from the date of purchase, VISION FITNESS, through its local retailers, will provide the necessary Labor for repair and replacement of Frames, Electronics, Motors, and Parts under this warranty, so long as the device remains in the possession of the original owner.

COMMERCIAL WARRANTY (continued)

EXCLUSIVE REMEDY

The exclusive remedy for any of the above warranties shall be repair or replacement of defective Parts or the supply of Labor to cure any defect, provided that the Labor be limited to one year.

EXCLUSIONS AND LIMITATIONS

This warranty applies only to the original owner and is not transferable. This warranty is expressly limited to the repair or replacement of a defective Frame, Electronic component, or defective Part and is the sole remedy of the warranty. The warranty does not cover normal wear and tear, improper assembly or maintenance, or installation of parts or accessories not originally intended or compatible with the product as sold. This warranty does not apply to damage or failure due to accident, abuse, corrosion, discoloration of paint or plastic or neglect. VISION FITNESS shall not be responsible for incidental or consequential damages. Parts and Electronic components reconditioned to As New Condition by VISION FITNESS or its vendors may sometimes be supplied as warranty replacement parts and constitute fulfillment of warranty terms. Any warranty replacement parts shall be warranted for the remainder of the original warranty term.

VISION FITNESS expressly disclaims all other warranties, express or implied, including but not limited to all warranties of fitness for a particular purpose or of merchantability. This warranty gives you specific rights, and your rights may vary from state to state.

WARRANTY REGISTRATION

Your warranty card must be completed and sent to VISION FITNESS before a warranty claim can be processed. We suggest that commercial facilities register via our website at www.visionfitness.com and complete the commercial customer survey. Your care in completing the survey will be of value to us in serving you in the future. You may also register by filling out and mailing in the enclosed warranty card. Comments and suggestions are always welcome. We are certain you will enjoy your new Fitness Bike. Thank you for selecting a VISION FITNESS product.

DEVELOPING A FITNESS PROGRAM

By purchasing this piece of VISION FITNESS exercise equipment, you have made a commitment to exercise and now have the convenience of exercising in your own home. Your new equipment offers the flexibility to exercise at whatever time suits you best. It will be easier to maintain a consistent exercise program that will help you achieve your fitness goals.

ACHIEVING YOUR FITNESS GOALS

An important step in developing a long-term fitness program is to determine your goals. Is your primary goal to lose weight? Improve muscle tone? Relieve stress? Prepare for the spring racing schedule? Knowing what your goals are will help you develop a more successful exercise program. If possible, try to define your personal goals in precise, measurable terms over specific periods of time. Examples of these goals might include:

- Decrease your waistline by two inches over the next two months.
- Run the local 5K race this summer.
- Get 30 minutes of cardiovascular exercise at least five days per week.
- Improve your race time by two minutes over the next year.
- Move from walking a mile to jogging a mile within the next three months.

The more specific the goal, the easier it will be to track your progress. If your goals are long-term, divide them into monthly and weekly segments. Long-term goals can lose some of the motivational benefits. Short-term goals are easier to achieve and will allow you to see the progress you are making. Every time you reach a goal, it is important to set a new goal. This will lead to a healthier lifestyle and will provide the motivation that you will need to move forward.

TRACK YOUR PROGRESS

Now that you have set your exercise goals, it is time to write them down and make an exercise schedule that will help you achieve them. By keeping a fitness diary, you will stay motivated and know where you are in terms of reaching your goals. As time goes on, you will be able to look back with pride to see how far you've come. For your convenience, we have included exercise log sheets at the end of this manual.

EXERCISE GUIDELINES

EXERCISE DURATION

A common question asked is, “how much exercise do I need?” We recommend following the guidelines set up by the American College of Sports Medicine (ACSM) for healthy aerobic activity.

- Exercise three to five days per week.
- Warm up for five to 10 minutes before aerobic activity.
- Maintain your exercise activity for 30 to 45 minutes.
- Gradually decrease the intensity of your workout, then stretch to cool down during the last five to 10 minutes.


If weight loss is a major goal, participate in your aerobic activity at least 30 minutes for five days each week.

EXERCISE INTENSITY

The next question asked is, “how hard do I need to work out?” To reap the most cardiovascular benefits from your workout, it is necessary to exercise within a recommended intensity range. We recommend using one of two methods to measure exercise intensity. These two methods are performed by monitoring your exercise heart rate or by using the Rate of Perceived Exertion (RPE).

TARGET HEART RATE

Target Heart Rate is a percentage of your maximum heart rate. Target Heart Rate will vary for each individual depending on age, current level of conditioning, and personal fitness goals. Exercise heart rate should range from 55% to 85% of your maximum heart rate. As a point of reference, we use the predicted maximum heart rate formula of (220 minus age) to determine your heart rate training zone. Please use the following chart to determine your predicted Target Heart Rate.

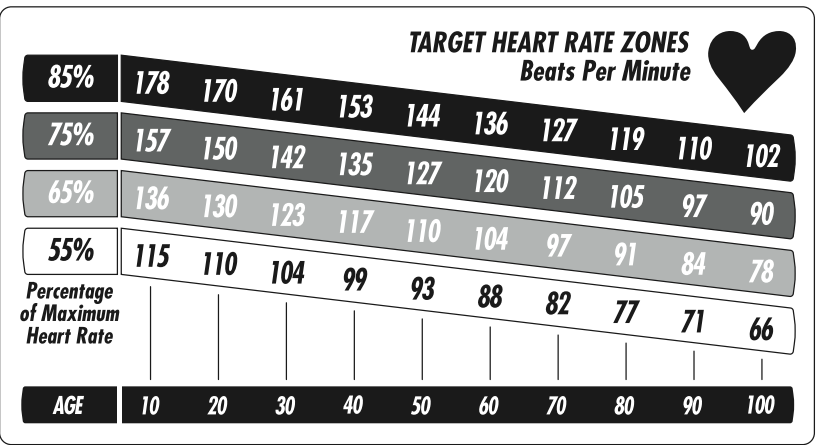

EXAMPLE:

If you are a 30-year-old, your predicted maximum heart rate is 190 based on the (220 minus age) formula.

$$220 - 30 = 190$$

Based on the chart above, your heart rate training zone is 104 to 161, which is 55%–85% of 190.

RATE OF PERCEIVED EXERTION

Rate of Perceived Exertion (RPE) is one of the easiest ways to monitor exercise intensity. By becoming familiar with the RPE scale, you can continually assess your level of intensity and insure a level of exertion that is comfortable. An increase in exercise intensity is directly related to elevation in exercise heart rate. Consequently, RPE can be used alone or together with heart rate when monitoring exercise intensity.

RPE SCALE

0	Nothing at all
.5	Very, very weak
1	Very weak
2	Weak
3	Moderate
4	Somewhat strong
5	Strong
6	
7	Very strong
8	
9	
10	Very, very, strong
Maximal	

The recommended RPE range during exercise for most people is between 3 (moderate) and 5 (strong). The RPE should be independent of your pace.

BALANCED FITNESS

While cardiovascular exercise has been the primary method of fitness for many programs over the years, it should not be the only method. Strength Training and Flexibility Training have become more popular as exercise has developed. Incorporating Strength and Flexibility Training into your current exercise program will give you the balance you need to improve your athletic performance, reduce susceptibility to injury, increase metabolic rate, increase bone density, and reach your goals faster.

STRENGTH TRAINING

Strength Training was once known as an activity performed by young males only. That has changed with the advances in scientific research on Strength Training over the last 20 years or so. Research has proven that, after age 30, we begin to lose muscle mass if we do not incorporate Strength Training into our exercise program. With this decrease in muscle mass, our ability to burn calories decreases, our physical ability to do work decreases and our susceptibility to injuries increases. The good news is that, with a proper Strength Training program, we can maintain or even build muscle as we age. A proper Strength Training program will work the muscle groups of the upper and lower body. There are now many options available for Strength Training including: yoga, Pilates, selectorized machines, free weights, stability balls or medicine balls, exercise tubing and body weight exercises, just to name a few.

Recommendations for a minimum Strength Training program include:

FREQUENCY: Two to three days per week

VOLUME: One to three sets consisting of eight to 12 repetitions


STRETCHING

Flexibility Training is not associated with fitness as often as cardiovascular exercise or Strength Training, even though it is just as important. A good stretching program will help to maintain flexibility of the hips and lower back. A flexible person will be less likely to injure themselves in common activities, such as reaching, twisting and turning, or in uncommon activities such as the annual softball tournament.

Before stretching, take a few minutes to warm up the muscles because stretching a cold muscle can cause injury. Start your stretch slowly, exhaling as you gently stretch the muscle. Try to hold each stretch 15 to 30 seconds. Don't bounce when you stretch. Holding a stretch offers less chance of injury. Don't strain or push a muscle too far. If it hurts, ease up. Here are a few stretches you can incorporate into your exercise program:


SEATED TOE TOUCH

Sit on the floor with your legs together and straight out in front of you. Do not lock your knees. Extend your fingers toward your toes, exhaling as you go. Hold for 15 to 30 seconds. Return to the start position, and repeat as necessary.

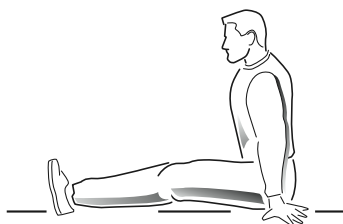


STANDING QUADRICEPS STRETCH

Using a wall to provide balance, grasp your left ankle with your left hand and hold to stretch. Your knee should be pointing toward the floor. Hold the stretch for 15 to 30 seconds. Repeat with your right leg, and continue to alternate as necessary.

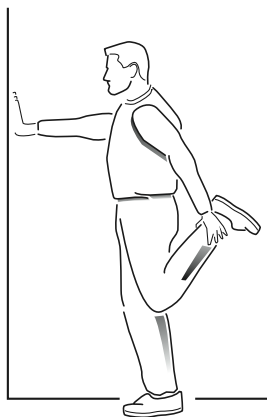

STANDING CALF STRETCH

Standing about three to four feet from the wall, take one step forward with your right foot. Place your hands on the wall in front of you. Bend your right leg slowly, using your movement to control the amount of stretch in the left calf. Your left heel should remain on the ground. Slowly bring yourself back to the starting position and switch legs. Repeat as necessary.

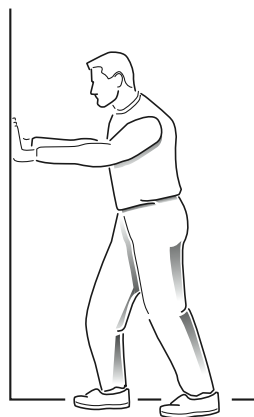

Week #

Weekly Goals:

Scheduled Workout Time:

Reward:

Day	Date	Workload Level	Exercise Time	Distance	Comments
Sunday					
Monday					
Tuesday					
Wednesday					
Thursday					
Friday					
Saturday					
Totals					

Week #

Weekly Goals:

Scheduled Workout Time:

Reward:

Day	Date	Workload Level	Exercise Time	Distance	Comments
Sunday					
Monday					
Tuesday					
Wednesday					
Thursday					
Friday					
Saturday					
Totals					

Week #

Weekly Goals: _____

Scheduled Workout Time: _____

Reward: _____

Day	Date	Workload Level	Exercise Time	Distance	Comments
Sunday					
Monday					
Tuesday					
Wednesday					
Thursday					
Friday					
Saturday					
Totals			<input type="text"/>	<input type="text"/>	

Week #

Weekly Goals: _____

Scheduled Workout Time: _____

Reward: _____

Day	Date	Workload Level	Exercise Time	Distance	Comments
Sunday					
Monday					
Tuesday					
Wednesday					
Thursday					
Friday					
Saturday					
Totals			<input type="text"/>	<input type="text"/>	

January

<i>Week</i>	<i>Minutes</i>	<i>Distance</i>
1		
2		
3		
4		
5		
Totals	<input type="text"/>	<input type="text"/>
Reward	<input type="text"/>	

February

<i>Week</i>	<i>Minutes</i>	<i>Distance</i>
1		
2		
3		
4		
5		
Totals	<input type="text"/>	<input type="text"/>
Reward	<input type="text"/>	

March

<i>Week</i>	<i>Minutes</i>	<i>Distance</i>
1		
2		
3		
4		
5		
Totals	<input type="text"/>	<input type="text"/>
Reward	<input type="text"/>	

April

<i>Week</i>	<i>Minutes</i>	<i>Distance</i>
1		
2		
3		
4		
5		
Totals	<input type="text"/>	<input type="text"/>
Reward	<input type="text"/>	

May

<i>Week</i>	<i>Minutes</i>	<i>Distance</i>
1		
2		
3		
4		
5		
Totals	<input type="text"/>	<input type="text"/>
Reward	<input type="text"/>	

June

<i>Week</i>	<i>Minutes</i>	<i>Distance</i>
1		
2		
3		
4		
5		
Totals	<input type="text"/>	<input type="text"/>
Reward	<input type="text"/>	

July

Week	Minutes	Distance
1		
2		
3		
4		
5		
Totals	<input type="text"/>	<input type="text"/>
Reward	<input type="text"/>	

August

Week	Minutes	Distance
1		
2		
3		
4		
5		
Totals	<input type="text"/>	<input type="text"/>
Reward	<input type="text"/>	

September

Week	Minutes	Distance
1		
2		
3		
4		
5		
Totals	<input type="text"/>	<input type="text"/>
Reward	<input type="text"/>	

October

Week	Minutes	Distance
1		
2		
3		
4		
5		
Totals	<input type="text"/>	<input type="text"/>
Reward	<input type="text"/>	

November

Week	Minutes	Distance
1		
2		
3		
4		
5		
Totals	<input type="text"/>	<input type="text"/>
Reward	<input type="text"/>	

December

Week	Minutes	Distance
1		
2		
3		
4		
5		
Totals	<input type="text"/>	<input type="text"/>
Reward	<input type="text"/>	

*it all
starts
with a
vision*



500 South CP Avenue • P.O. Box 280

Lake Mills, WI 53551

toll free 1.800.335.4348 • phone 1.920.648.4090

fax 1.920.648.3373

www.visionfitness.com

©2005 Vision Fitness. All Rights Reserved.

HRT is a Trademark of Vision Fitness.

5.05 Part #Z26RB77-OM

OM18.31PRD

REV3